




SAE CLASS 1 WINDSHIELD MOUNTS

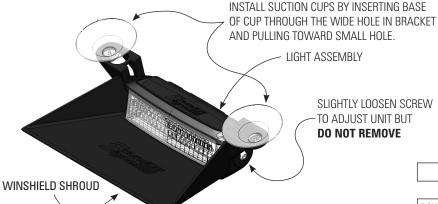

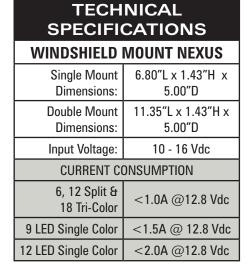

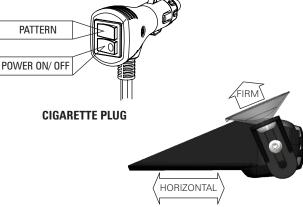

Please see reverse for Technical Specifications

Important Information: -

SINGLE WINDSHIELD MOUNT NEXUS

Warning devices are strictly regulated and governed by Federal, State and Municipal ordinances.
These devices shall be used ONLY on approved vehicles. It is the sole responsibility of the user of these devices to ensure compliance.

DOUBLE WINDSHIELD MOUNT NEXUS

• DO NOT connect this device to a strobe power supply. This product is self-contained and does not require an external power supply.

CHECK FOR PROPER INSTALLATION:

- 1. All suction cups are pressed to windshield as firmly as possible.
- 2. Unit is mounted horizontally.
- 3. Shroud fits tights against windshield.

INSTALLATION:

Windshield should be clean and free of grease or oil. The placement of the windshield mount Nexus™ should not restrict driver visibility and the unit should be placed so that air bag deployment will not be restricted. The best place for unit is immediately behind the rear-view mirror.

- Press suction cups into the side yokes of the light as shown in the illustration.
- Lightly moisten suction cups and press unit firmly in place by pressing the domed shape on the back of each cup.



his product contains high intensity LEU devices. To prevent eye damage, DO NOT stare into the light beam at close range.

ADJUSTMENT:

- 1) Slightly loosen, but DO NOT REMOVE, pivot screws on each side of unit.
- 2) Slide light up until all four edges on shroud are in contact with windshield.
- 3) Pivot light so that unit will project a horizontal pattern
- 4) Retighten pivot screws. CAUTION! DO NOT OVERTIGHTEN SCREWS AS UNIT CAN BE DAMAGED.

To review our Limited Warranty Statement & Return Policy for this or any SoundOff Signal product please visit our website at www.soundoffsignal.com and select the "Warranty & Returns" link along the left column of our home page. If you have questions regarding this product please contact Technical Services, Monday - Friday, 8 am to 5 pm at 1.800.338.7337, press #4 to skip the automated message. Questions or comments that do not require immediate attention may be emailed to techsupport@soundoffsignal.com.

1.800.338.7337. / www.soundoffsignal.com / Thank you for trusting us with your safety!

PATTERN LIST

1 COLOR MODULE PATTERNS				
# OF COLORS	#	NAME		
1	1	QUINT		
	2	WARP		
	3	INTER-CYCLE		
	4	DOUBLE		
	5	QUAD		
	6	POWER PULSE		
	7	ROAD RUNNER		
	8	Q-SWITCH		
	9	STEADY-BURN DRIVER ROADRUNNER (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: ROADRUNNER)		
	10	STEADY-BURN DRIVER TITLE 13 QUAD (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: TITLE 13 QUAD)		
	11	QUAD 2		
	12	DOUBLE 2		

OPERATION:

Electrical Connections & Flash Pattern Selection:

See diagram on page 1 for Power ON, Power OFF and Pattern SELECT switch positions. Turn the light on by pressing the Power ON button.

The pattern select switch will allow you to change various settings on the module. Reference the table below.

SECONDS		USER INTERFACE			
FROM	TO	VISUAL FEEDBACK	ACTION TAKEN		
0	1	STEADY-HIGH (60%)	FORWARD ONE PATTERN		
1	2	STEADY-LOW (30%)	BACKWARD ONE PATTERN		
2	3	OFF	COLOR SWAP (OFF OR ON)		
3	4	STEADY - HIGH	SEQUENCE TYPE (1 OR 2)		
4	5	STEADY - LOW	RESET TO PATTERN 1		
5	6	OFF	FACTORY RESET (PATTERN 1, COLOR SWAP: OFF, SEQUENCE TYPE: 1)		

If held longer than 6 seconds, the light will go back to flashing the current pattern and no action will be taken.

2 CO	2 COLOR MODULE PATTERNS			
# OF COLORS	#	NAME		
2	1	QUINT		
	2	WARP		
	3	INTER-CYCLE		
	4	DOUBLE		
	5	QUAD		
	6	POWER PULSE		
	7	ROAD RUNNER		
	8	Q-SWITCH		
	9	STEADY-BURN DRIVER ROADRUNNER (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: ROADRUNNER)		
	10	STEADY-BURN DRIVER TITLE 13 QUAD (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: TITLE 13 QUAD)		
	11	QUAD 2		
	12	DOUBLE 2		
1	13	QUINT		
	14	WARP		
	15	INTER-CYCLE		
	16	DOUBLE		
	17	QUAD		
	18	POWER PULSE		
	19	ROAD RUNNER		
	20	Q-SWITCH		
	21	STEADY-BURN DRIVER ROADRUNNER (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: ROADRUNNER)		
	22	STEADY-BURN DRIVER TITLE 13 QUAD (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: TITLE 13 QUAD)		
	23	QUAD 2		
	24	DOUBLE 2		

3 COLOR MODULE PATTERNS				
# OF COLORS	#	NAME		
3	1	QUINT		
	2	WARP		
	3	INTER-CYCLE		
	4	DOUBLE		
	5	QUAD		
	6	POWER PULSE		
	7	ROAD RUNNER		
	8	Q-SWITCH		
	9	STEADY-BURN DRIVER ROADRUNNER (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: ROADRUNNER)		
	10	STEADY-BURN DRIVER TITLE 13 QUAD (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: TITLE 13 QUAD)		
	11	QUAD 2		
	12	DOUBLE 2		
2	13	QUINT		
	14	WARP		
	15	INTER-CYCLE		
	16	DOUBLE		
	17	QUAD		
	18	POWER PULSE		
	19	ROAD RUNNER		
	20	Q-SWITCH		
	21	STEADY-BURN DRIVER ROADRUNNER (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: ROADRUNNER)		
	22	STEADY-BURN DRIVER TITLE 13 QUAD (SEQUENCE TYPE 1: STEADY BURN, SEQUENCE TYPE 2: TITLE 13 QUAD)		
	23	QUAD 2		
	24	DOUBLE 2		