

WHELEN[®]

ENGINEERING COMPANY INC.

51 Winthrop Road
Chester, Connecticut 06412-0684
Phone: (860) 526-9504
Fax: (860) 526-4078
Internet: www.whelen.com
Sales e-mail: autosale@whelen.com
Canadian Sales e-mail: canadiansales@whelen.com
Customer Service e-mail: custserv@whelen.com

Installation Guide: Freedom™ HC Lightbar Rota-Beam™ Series

Safety First

This document provides all the necessary information to allow your Whelen product to be properly and safely installed. Before beginning the installation and/or operation of your new product, the installation technician and operator must read this manual completely. Important information is contained herein that could prevent serious injury or damage.

- **Proper installation of this product requires the installer to have a good understanding of automotive electronics, systems and procedures.**
- **Whelen Engineering recommends the use of waterproof butt splices and/or connectors if that connector could be exposed to moisture.**
- **Failure to use specified installation parts and/or hardware will void the product warranty!**
- **If mounting this product requires drilling holes, the installer MUST be sure that no vehicle components or other vital parts could be damaged by the drilling process. Check both sides of the mounting surface before drilling begins. Also de-burr any holes and remove any metal shards or remnants. Install grommets into all wire passage holes.**
- **If this manual states that this product may be mounted with suction cups, magnets, tape or Velcro®, clean the mounting surface with a 50/50 mix of isopropyl alcohol and water and dry thoroughly.**
- **Do not install this product or route any wires in the deployment area of your air bag. Equipment mounted or located in the air bag deployment area will damage or reduce the effectiveness of the air bag, or become a projectile that could cause serious personal injury or death. Refer to your vehicle owner's manual for the air bag deployment area. The User/Installer assumes full responsibility to determine proper mounting location, based on providing ultimate safety to all passengers inside the vehicle.**
- **For this product to operate at optimum efficiency, a good electrical connection to chassis ground must be made. The recommended procedure requires the product ground wire to be connected directly to the NEGATIVE (-) battery post.**
- **If this product uses a remote device to activate or control this product, make sure that this control is located in an area that allows both the vehicle and the control to be operated safely in any driving condition.**
- **Do not attempt to activate or control this device in a hazardous driving situation.**
- **This product contains either strobe light(s), halogen light(s), high-intensity LEDs or a combination of these lights. Do not stare directly into these lights. Momentary blindness and/or eye damage could result.**
- **Use only soap and water to clean the outer lens. Use of other chemicals could result in premature lens cracking (crazing) and discoloration. Lenses in this condition have significantly reduced effectiveness and should be replaced immediately. Inspect and operate this product regularly to confirm its proper operation and mounting condition. Do not use a pressure washer to clean this product.**
- **It is recommended that these instructions be stored in a safe place and referred to when performing maintenance and/or reinstallation of this product.**
- **FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS AND INSTRUCTIONS COULD RESULT IN DAMAGE TO THE PRODUCT OR VEHICLE AND/OR SERIOUS INJURY TO YOU AND YOUR PASSENGERS!**

For warranty information regarding this product, visit www.whelen.com/warranty



IMPORTANT! The lightbar must be a minimum of 16" from radio antennas!

Permanent Mounting:

1. Locate the mounting foot and locking plate included with your lightbar. If not already present, install the locking plate onto the mounting foot using the supplied allen set screws (Fig. 1).
2. Flip the lightbar upside-down to expose the bottom of the extrusion. Place the mounting foot into the extrusion and rotate the foot so that the top of the foot swings into position under the lips in the extrusion (Figs. 2, 3 & 4). **NOTE: You do not need the anchor plate shown in Figs. 2 - 4. This is used in strap mounting.**
3. Repeat this procedure for the remaining mounting foot and return the lightbar to its right side-up position.
4. Position the lightbar onto the vehicle roof in the desired mounting location. One often selected location is directly above the B-pillars. This area is the strongest part of the roof. Check the light bar cable exit location to be sure that the lightbar is facing the proper direction (Cable exits in rear).
5. Adjust the mounting feet outwards so that they are as close to the edge of the roof as possible (See below). When the mounting feet are properly positioned, lightly tighten the allen head set screws.
6. Turn the lightbar upside down and firmly tighten all of the mounting foot allen head set screws (Fig.4). With the lightbar upside down, drill 2 holes into the mounting foot (for the mounting bolts) using the holes in the mounting pads as guides, in the location shown in figure 1.
7. Place the lightbar in its final mounting position on the vehicle, mark the mounting hole locations off onto the mounting surface, remove the lightbar and drill the mounting holes. You will need to lower the vehicle headliner (if present) for steps 7 & 8.
8. Place the lightbar back onto the vehicle lined up with the mounting holes and secure the mounting feet to the vehicle using the supplied hardware.

Fig. 1

Standard Mounting Foot Model MKEZ

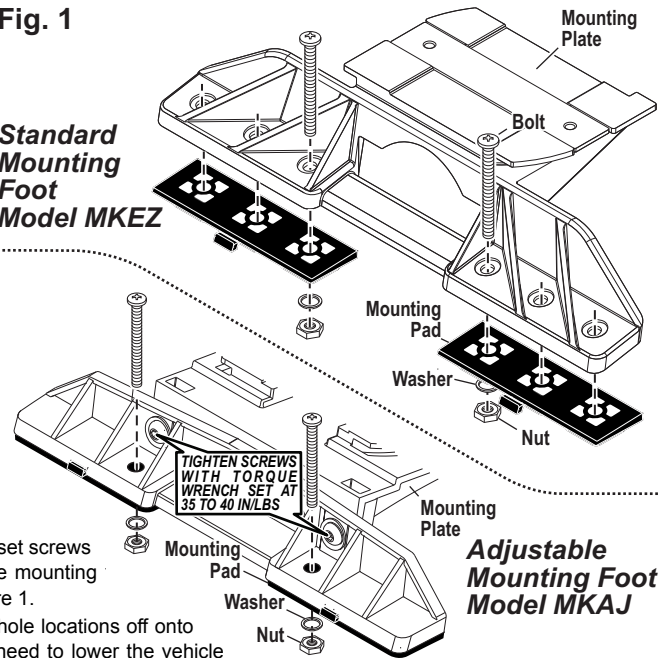

IMPORTANT: Unless otherwise specified, the lightbar mounting feet must be sitting as close to the edge of the roof as possible. Mounting feet must also be in full contact with the roof and not be hanging off the edge. For strap mounted bars, the lightbar should be about the same width as the vehicle roof. If the lightbar is too large or small it will not mount properly to the vehicle and may shift or come loose during driving.




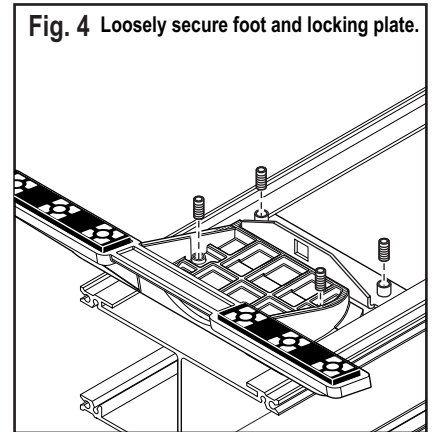



Fig. 5

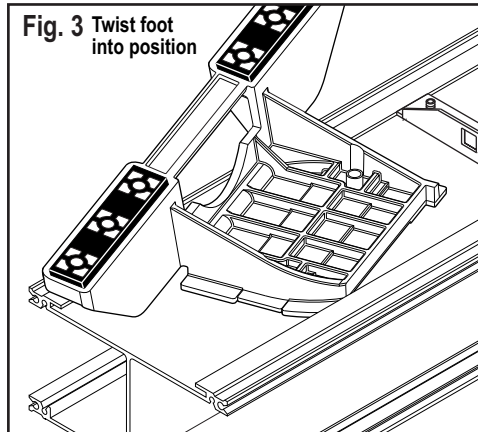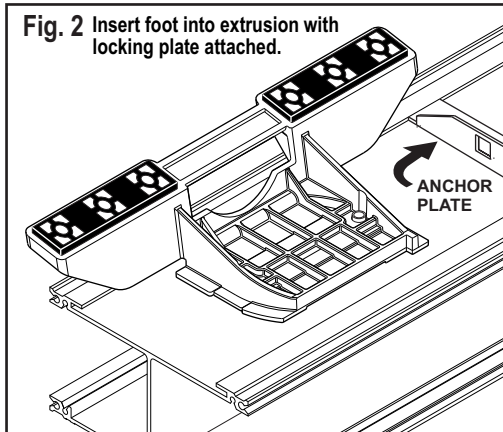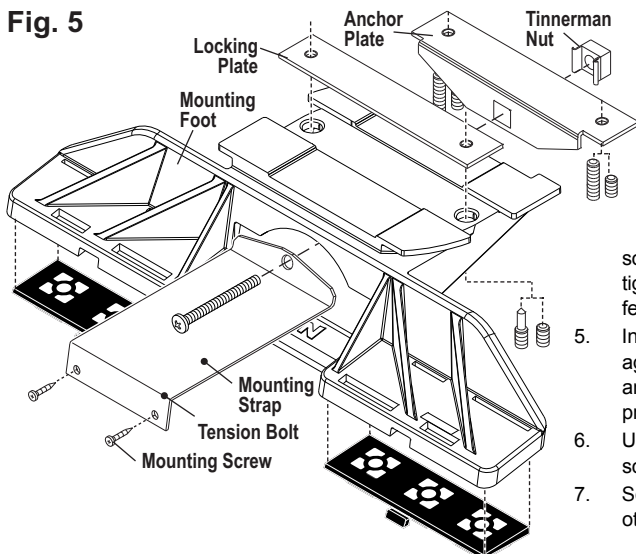

Strap Mounting:

1. Locate the mounting foot, anchor plate and locking plate. Loosely install the locking plate onto the mounting foot using the allen set screws (Fig. 5).
2. Flip the lightbar upside-down, install an anchor plate onto the extrusion and place a mounting foot onto the extrusion (Fig. 2). Rotate the foot 90° counter-clockwise (Fig. 3) so that both sides slide under the lip in the extrusion.
3. Repeat this procedure for the remaining mounting foot and return the lightbar to its right side-up position.
4. Position the lightbar on the vehicle roof and adjust the two mounting feet outwards so that the mounting pads are resting near the edge of the roof. When properly positioned, tighten the allen screws to hold them in place. Also slide the anchor plates up to the mounting feet and tighten the allen screws securing the anchor plates.
5. Insert the mounting strap onto the mounting foot (Fig. 5). Be sure that the strap fits flush against the vehicle where it will be secured. Insert the tension bolt through the mounting strap and into the anchor plate. Tighten slightly with a long-shafted, Phillips screwdriver. Repeat procedure for other side of vehicle.
6. Use the holes in the end of the strap as a template to drill the pilot holes for the sheet metal screws through the strap and into the vehicle. Repeat for other side of vehicle.
7. Screw the sheet metal screws into the holes you drilled in step 6 and tighten firmly. Repeat for other side of the vehicle. Firmly tighten the tension bolt to secure the lightbar to the vehicle.

IMPORTANT! When routing the wires, it is important to choose a path that will keep the wires away from excessive heat or any vehicle equipment that could compromise the integrity of the wires (ex. trunk lids, door jams, etc.) Before returning the vehicle to service, confirm the proper operation of this product, as well as all vehicle components/equipment.

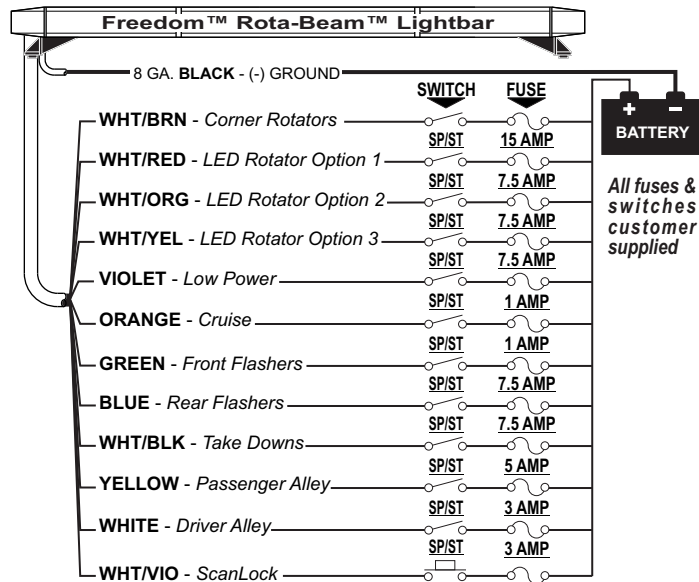

Control Cable Wire Operation:

Wht/Vio: Scan-Lock™ (Fuse wire @ 1 AMP)

To change the flash pattern on any option, activate only that option.

TO CHANGE PATTERNS: To cycle forward to the next available pattern apply +VBAT to the WHITE-VIOLET wire for less than 1 second and release. To cycle back to the previous pattern apply +VBAT to the WHITE-VIOLET wire for more than 1 second and release.

TO CHANGE THE DEFAULT PATTERN: When the desired pattern is displayed, allow it to run for more than 5 seconds. The lighthouse will now display this pattern when initially activated.

TO RESTORE THE FACTORY DEFAULT PATTERN: Turn power to the lighthouse off. While applying +VBAT to the WHITE-VIOLET wire, turn power to the lighthouse on. The factory default pattern is now displayed.

Use a Normally Open Momentary Switch for Scan-Lock™ operation.

Orange: Cruise (Fuse wire @ 7.5 AMPS)

Applying +VBAT to the ORG wire activates all four corner rotators at low intensity with no flash. Choose from 4 light intensities using Scan-Lock™.

Violet: Low Power (Fuse wire @ 1 AMP)

Switch type is dependant on how the operator wishes Hi/Low to function:

Latching Mode: Apply +VBAT to the VIO wire for less than 1 sec., the power supply is "latched" into low power. The unit must be turned off and then back on to restore normal operation. (Momentary switch)

Level Mode: Apply +VBAT to the VIO wire for over 1 sec. The power supply stays in low power mode until voltage is removed. (Toggle Switch)

Wht/Brn: Corner Rotators (Fuse wire @ 15 AMPS)

Applying +VBAT to the WHT/BRN wire activates Corner Rotators.

Wht/Red: LED Rotator Option #1 (Fuse wire @ 7.5 AMPS)

Applying +VBAT to the WHT/RED wire activates Option #1.

Wht/Org: LED Rotator Option #2 (Fuse wire @ 7.5 AMPS)

Applying +VBAT to the WHT/ORG wire activates Option #2.

Wht/Yel: LED Rotator Option #3 (Fuse wire @ 7.5 AMPS)

Applying +VBAT to the WHT/YEL wire activates Option #3.

White: Driver Side Alley Light (Fuse wire @ 3 AMPS)

Applying +VBAT to the WHT wire activates Driver Side Alley.

Yellow: Passenger Side Alley Light (Fuse wire @ 3 AMPS)

Applying +VBAT to the YEL wire activates Passenger Side Alley

Wht/Blk: Take Downs (Fuse wire @ 5 AMPS)

Applying +VBAT to the WHT/BLK wire activates Take Downs.

Green: Front Flashers (Fuse wire @ 7.5 AMPS)

Applying +VBAT to the GREEN wire activates Front Flashers.

Blue: Rear Flashers (Fuse wire @ 7.5 AMPS)

Applying +VBAT to the BLUE wire activates Rear Flashers.

NOTE: Rotator Options #1, #2 and #3 can run up to two rotators each.


WARNING! All customer supplied wires that connect to the positive terminal of the battery must be sized to supply at least 125% of the maximum operating current and FUSED at the battery to carry that load. DO NOT USE CIRCUIT BREAKERS WITH THIS PRODUCT!

Ground Cable: Black: Ground Wire / Extend to ground.

ROTATOR flash patterns operate as shown. You can change the pattern speed and direction (75 or 150 FPM) (clockwise or counterclockwise). In patterns 9 - 14 each LED panel will flash in ModuFlash, DoubleFlash or QuadFlash.


WIGWAG flash patterns operate as shown. The difference in available WIGWAG flash patterns is the speed the pattern cycles (75 or 150 FPM).

Center WIGWAG is the same except after each sweep there is a delay before the pattern sweeps back simulating the light going around a full beacon.

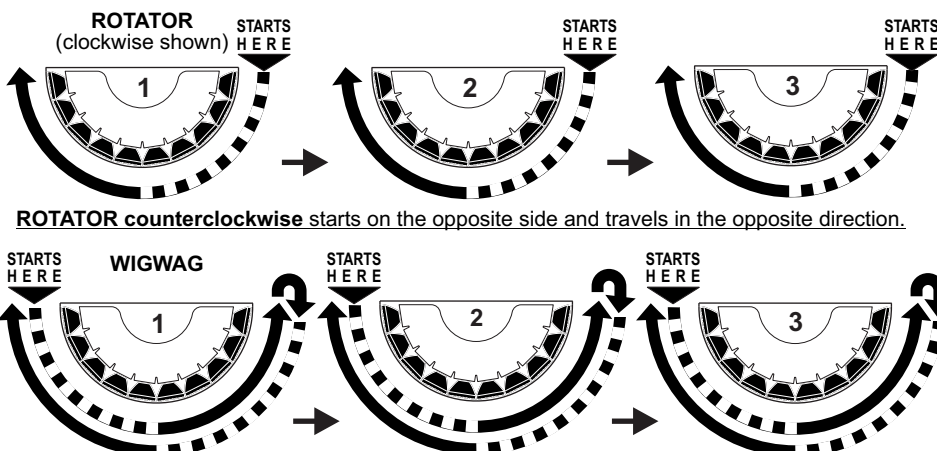

Flash Patterns:

#	PATTERN	DIRECTION
1.	Rotator 75	Counter Clockwise
2.	Rotator 75	Clockwise
3.	Rotator 150	Counter Clockwise
4.	Rotator 150	Clockwise
5.	WigWag 75	N/A
6.	WigWag 150	N/A
7.	Center WigWag 75	N/A
8.	Center WigWag 150	N/A
9.	Rotator ModuFlash™	Counter Clockwise
10.	Rotator ModuFlash™	Clockwise

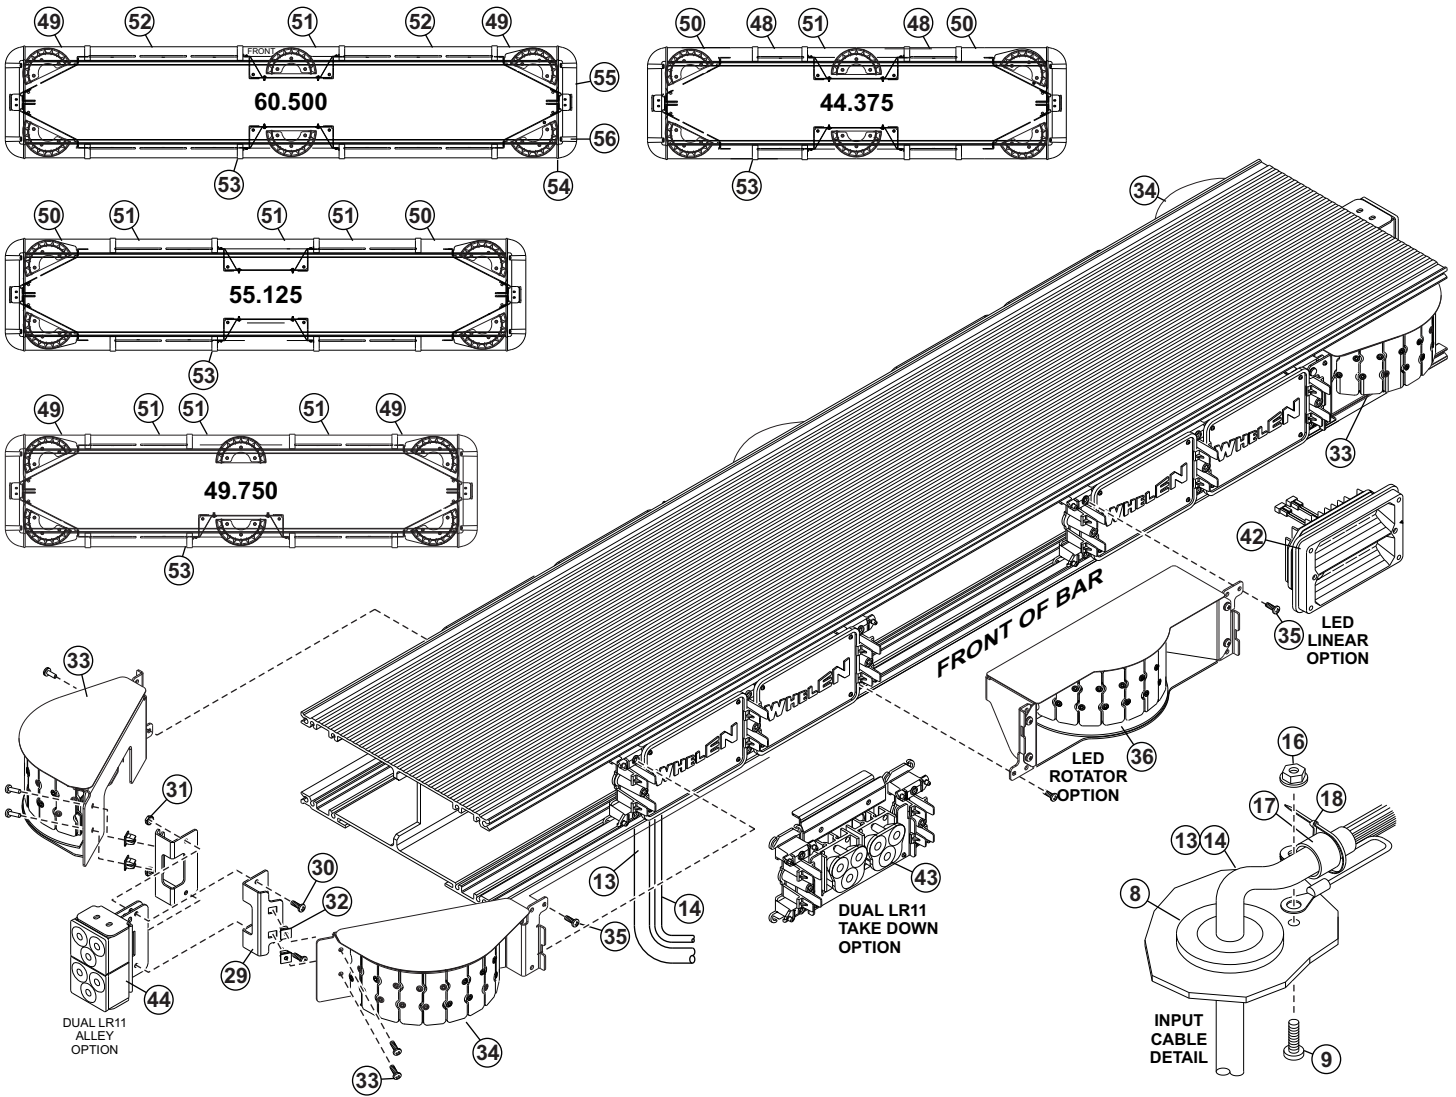

QTY	QTY	QTY	QTY	QTY	ITEM	PART NUMBER	DESCRIPTION
			*			01-0687466-___	FREEDOM (HC) ROTA-BEAM 50"
			*			01-0687466-___	FREEDOM (HC) ROTA-BEAM 55"
		*				01-0687466-___	FREEDOM (HC) ROTA-BEAM 60"
		*				01-0687466-___	FREEDOM (HC) ROTA-BEAM 44"
*						01-0687466-___	FREEDOM (HC) ROTA-BEAM 72"
-	-	-	-	1	1	11-363141-000	BASE EXTRUSION (45.75")
-	-	-	-	1	2	11-363142-000	BASE EXTRUSION (51.125")
-	-	-	-	1	3	11-363143-000	BASE EXTRUSION (56.50")
-	-	-	-	1	4	11-363390-000	BASE EXTRUSION (40.375")
2	2	2	2	2	5	22-0542701-00	MTG. STUD
2	2	2	2	2	6	21-242401-000	BUSHING, 1-5/8"
2	2	2	2	2	7	21-7263998-00	VENT, 3/4"
1	1	1	1	1	8	21-11245004-1	GROMMET, 1.562"
1	1	1	1	1	9	14-104216-160	#10-24 x 1 PPHMS
1	1	1	1	1	10	01-026E714-00	HC POWER DIST., FREEDOM ROTA-BEAM
2	2	2	2	2	11	13-130111-072	NUT, 1/4-20 ELASTIC STOP (316 SS)
4	4	4	4	4	12	22-0416982-00	PROTECTIVE COVER
1	1	1	1	1	13	46-0746850-00	CABLE INPUT DELTA ROTATOR LIGHTBAR
1	1	1	1	1	14	67-1N00800M00	WIRE, 8 GA 20' BLACK 5952-BK CONTACT/STRIP 3/16
1	1	1	1	1	15	39-0001007-00	HSNG, 1 POS, 75A, BLK POWERPOLE 75
1	1	1	1	1	16	13-104111-063	NUT, #10-24 WHIZ
1	1	1	1	1	17	26-0115663-10	CABLE CLAMP, 5/8"
1	1	1	1	1	18	26-0215001-06	TY WRAP, 6" BLACK
1	1	1	1	1	19	46-076E762-05	ASSY, HARNESS 5" LED ROTA-BEAM
-	2	-	-	2	20	46-076E762-10	ASSY, HARNESS 10" LED ROTA-BEAM
2	2	2	2	2	21	46-076E762-20	ASSY, HARNESS 20" LED ROTA-BEAM
1	1	3	3	3	22	46-076E762-30	ASSY, HARNESS 30" LED ROTA-BEAM
2	2	2	2	2	23	46-076E762-40	ASSY, HARNESS 40" LED ROTA-BEAM
2	-	2	2	-	24	46-076E762-50	ASSY, HARNESS 50" LED ROTA-BEAM
A/R	A/R	A/R	A/R	A/R	25	26-0215001-03	TY WRAP, 3" BLACK
22	14	18	18	14	26	07-263103-000	MOUNTING BRACKET
20	8	16	12	12	27	09-1363158-00	FILLER PANEL, *400" SERIES
-	4	-	4	-	28	07-242815-000	BRACKET, SPACER

4	4	4	4	4	29	07-246869-000	BRCKT, CLAMP 180 END ROTATOR FREEDOM BLK
4	4	4	4	4	30	14-062216-121	SCREW, 6-32 X 3/4 PPHMS SEMS W/IT LOCK WASHER SS
4	4	4	4	4	31	13-062111-053	NUT, 6-32 X 5/16 WHIZ LOCK STEEL ZINC PLATED
8	8	8	8	8	32	13-062C40-16J	SCREW GROMMET, #6/#8 FASTEX
2	2	2	2	2	33	01-0287455-*0	FREEDOM ROTATOR, PHASE 1
2	2	2	2	2	34	01-0287456-*0	FREEDOM ROTATOR, PHASE 2
12	12	12	12	12	35	15-065419-080	SCREW, 6 X 1/2 PPH PLASTI 410 SS
A/R	A/R	A/R	A/R	A/R	36	01-0287457-*0	FREEDOM ROTATOR, CENTER, PHASE 1
A/R	A/R	A/R	A/R	A/R	37	01-026A213-05	ELECT RESPONDER FLASHER 6 CHANNEL
A/R	A/R	A/R	A/R	A/R	38	08-0617078-00	RUBBER BUMP, .375 SQUARE BLK .185 HGT
A/R	A/R	A/R	A/R	A/R	39	14-062216-081	SCREW, 6-32 X 1/2 PPHMS SEMS W/IT LOCK WASHER 410 SS
A/R	A/R	A/R	A/R	A/R	40	46-0787428-02	HARN. FLASHER HC DELTA ROTA-BEAM
A/R	A/R	A/R	A/R	A/R	41	46-0787523-04	HARN. FLASHER OUTPUT FREEDOM ROTA-BEAM
A/R	A/R	A/R	A/R	A/R	42	01-02863612**	LINEAR LED 400 AMP
A/R	A/R	A/R	A/R	A/R	43	01-026A936-01	SUB ASSY, DUAL LR11 TAKEDOWN 100lm
A/R	A/R	A/R	A/R	A/R	44	01-026B047-31	SUB ASSY, DUAL LR11 ALLEY 100lm
A/R	A/R	A/R	A/R	A/R	45	46-0743719-00	HARN. "Y" LR11
A/R	A/R	A/R	A/R	A/R	46	46-0787523-00	HARN. TAKE DOWN FREEDOM ROTA-BEAM
A/R	A/R	A/R	A/R	A/R	47	46-0787523-02	HARN. ALLEY FREEDOM ROTA-BEAM
-	4	-	-	-	48	68-1983816-30	LENS, 5.00" CLEAR
-	4	-	-	-	49	68-1983817-30	LENS, 6.562" CLEAR
-	4	-	-	-	50	68-1984104-30	LENS, 9.25" CLEAR
8	2	2	6	6	51	68-1183491C02	LENS, 10.375" CLEAR
-	-	4	-	-	52	68-1984105-30	LENS, 15.75" CLEAR
12	8	8	8	8	53	02-0341448-30	LENS DIVIDER ASSY. (CLEAR)
2	2	2	2	2	54	38-0283381-00	GASKET, ENDCAP EDGE 9000
2	2	2	2	2	55	68-1183369-30	ENDCAP, CLEAR
8	8	8	8	8	56	14-104286-16JB	#10-24 x 1-1/4" TX. PHD. SCREW W/SHLDR
1	1	1	1	1	57	10-0523067-02	LABEL, MODEL & SERIAL NO.
A/R	A/R	A/R	A/R	A/R	58	38-0417738-00	O RING, CORD STOCK .093 DIA
1	1	1	1	1	59	10-0322935-00	LABEL, "FRONT" LIGHTBAR ASSYS
1	-	-	-	-	60	11-363653-067	BASE, EXTRUSION 67.25"
2	-	-	-	-	61	46-076E762-60	ASSY, HARNESS 60" LED ROTA-BEAM